

FCC COMPLIANCE

This equipment has been tested and found to comply with the limits for a class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation, even if installed correctly. If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment off and on) the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to an outlet that is connected to a different circuit to the circuit on which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician if you require any additional help.

 
This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



The crossed-out wheeled bin symbol indicates that the item should be disposed of separately from household waste. The item should be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from household waste, you will help to reduce the volume of waste sent to incinerators or landfill sites, which helps to minimize any potential negative impact on human health and the environment.

BATTERY INSTALLATION (FIG. 1)

- The battery cover (located on the base of the Yuyuni Outdoor Lantern) can be opened by loosening the screws with a small star screwdriver.
- Insert two C batteries and ensure that the “+” and “-” poles on the battery line up with the “+” and “-” poles inside the battery chamber. Replace the battery cover and tighten the screws before operating the Yuyuni Outdoor Lantern.

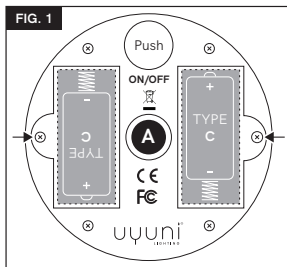

CARE INSTRUCTIONS

- Clean the Yuyuni Outdoor Lantern and Wall Mount with a soft, damp cloth. The plastic components of the Yuyuni Outdoor Lantern and Wall Mount could become brittle and discoloured after prolonged exposure to sun and rain. This period may be shorter if it is positioned in direct sunlight.
 - Clean the Metal Holder and Spike by wiping with a dry cloth on a regular basis. Although the surface of the Metal Holder and Spike are powder-coated, the products can become rusty and discoloured over time.
 - If required, the candle can be cleaned using a mild household soap and a soft, damp cloth.
- To activate the 6-hour timer function, turn the candle ON and then press the button down until the LED blinks twice. This will activate the timer function to turn the candle ON every day at the same time, and it will also turn the candle OFF after 6 hours.*

REMOTE LANTERN OPERATION

- The remote control will activate the candle if you point it towards the candle and press the ON button. To turn the candle light off, point the remote control at the candle and press the OFF button.
- The remote control can activate the candle from a range of approximately 5 meters.

uyuni[®]
LIGHTING

info@yuyunilighting.com
www.yuyunilighting.com
+45 70 666 888

©2021 Yuyuni Lighting Denmark
Bymosevej17, DK-3200 Helsingør
All Rights Reserved. Printed in China.
Patent Pending

USE WITH ACCESSORIES

- The Yuyuni Outdoor Lantern is designed to be used with a range of custom accessories (shown on the following page), all of which screw into the threaded hole “A”.

IMPORTANT SAFETY INSTRUCTIONS

- Handle with care. Please do not pull or hold the candle by the LED flame or position the candle upside down with the electronic flame pressed against any surface, as this could damage the product.
- Please note that Yuyuni Outdoor Lanterns should not be stored or used in temperatures lower than -10°C or above 40°C.
- Yuyuni Outdoor Lanterns are water-resistant (IPX5), but should not be placed or kept in water.
- Failure to insert the batteries in the correct polarity (as indicated inside the battery compartment) may shorten the life of the batteries or cause them to leak which, in turn, could damage the lantern.
- Do not use a combination of old and new batteries to power the candle. Do not mix Alkaline, Carbon Zinc, Rechargeable Nickel Cadmium or Rechargeable Nickel Hydride batteries in the battery chamber.

Congratulations on the purchase of your Yuyuni® Outdoor Lantern!

The Yuyuni® Outdoor Lantern has a LED candle with a 3D electronic flame that gently flickers, creating a soft and inviting light. Yuyuni Outdoor Lanterns are battery-powered and can be controlled using the manual switch, the Yuyuni Remote Control or the timer settings.

Use the lantern on its own or with its custom accessories in order to illuminate your home and outdoor space, creating focal areas of light and warmth.


The Yuyuni Salt Flats in Bolivia are famous for the crystal clear night skies in which the stars shine brighter than almost anywhere else on Earth. Yuyuni candles bring the aura of these distant galaxies into your home as their gently flickering lights illuminate the dark to create a restful and inviting ambiance.

- Do not dispose of batteries in a fire. Recycle or dispose of batteries as per battery manufacturer recommendations.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Only use manufacturer-specified batteries.**
- Remove batteries from the product when not in use or before extended storage.
- Always use and replace batteries under adult supervision.

**NOTE: Alkaline batteries are recommended for maximum battery life.

* The timer will activate the candle and turn it on every day at the same time as when you last set it. For instance, if you want the candle to turn itself ON every night at 8:10pm, ensure that you set the timer at 8:10pm on the first night. The candle will then turn itself OFF at 2:10am every morning, and then repeat the cycle daily.

LANTERN ACCESSORIES

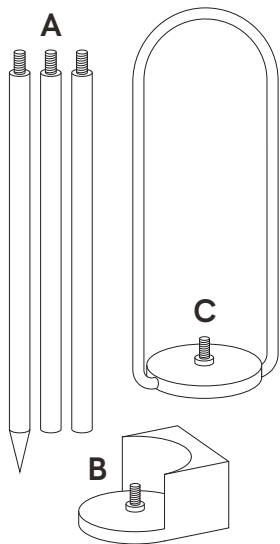

A - LANTERN SPIKE (FIG. 2 & 3)

The Lantern Spike is a perfect outdoor accessory to make your Uyuni Outdoor Lantern a standout feature in your garden. The brushed-steel Lantern Spike will hold your lantern sturdy while complementing the simple and minimalist aesthetic of the Uyuni Outdoor Lantern design.

The Lantern Spike can be assembled in three different heights by using the spike parts 1, 2 and 3 together (FIG. 3), joining just parts 1 and 2 (FIG. 3), or using just part 1 on its own (FIG. 2).

B - LANTERN WALL MOUNT (FIG. 4 & 5)

Showcase your Uyuni Outdoor Lantern on any inside or outside wall in your home with the functional Uyuni Lantern Wall Mount. Splash-proof and sturdy, this Lantern accessory is a stylish addition to your collection.

C - LANTERN METAL HOLDER (FIG. 6)

Exclusively designed for your Uyuni Outdoor Lantern, the Lantern Metal Holder creates a hanging functionality and aesthetic, letting you hang your Uyuni Outdoor Lantern to create the perfect ambience. The Lantern Metal Holder boasts brushed steel and elegant curves to complement the contemporary design of the iconic Uyuni Outdoor Lantern.

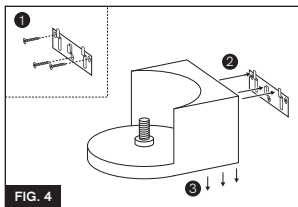 


FIG. 4

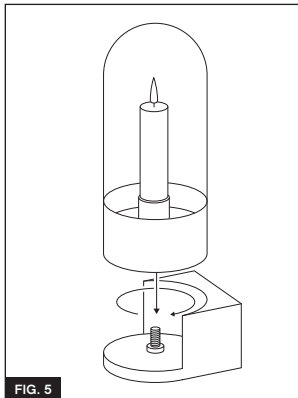 


FIG. 5

 
 
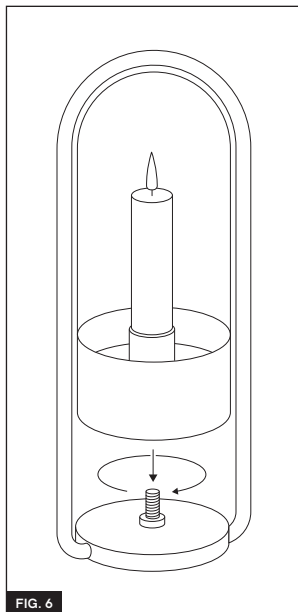 




 
FIG. 6

 FIG. 2

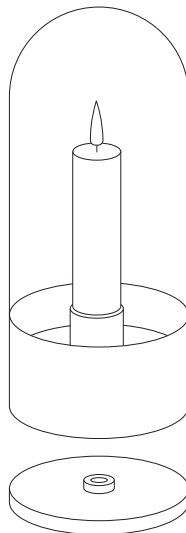

1

 FIG. 3

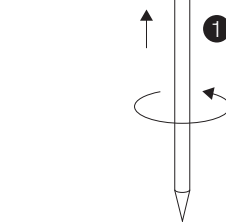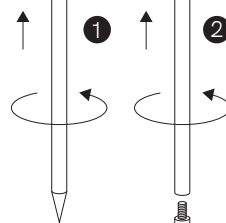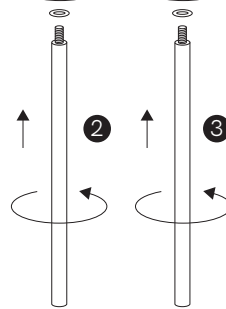

1